

Digital Leak Sensor



Operation & Installation Manual

⚠ IMPORTANT

Disconnect power and read installation and operation instructions before installing or operating.

Installation Instructions

Install the sensor with the metal strips facing the ground and the LED's facing UP.

Wiring Connections

Four wires are required to connect a rain sensor to GrowControl systems; V+, V- and the input signal. Connect the input signal to any available digital input terminal and set this value in the rain sensor control settings.

Leak Sensor Connection to Digital Inputs

