



“Limit Switch” loops must be closed for MX1 to operate. An open limit switch will disable the relay(s.) **ENSURE JUMPERS ARE IN PLACE.**

24Vdc Power Supply

Line Voltage Supply Input

Line Voltage Output to Motor

RIDDER LIMIT SWITCHES

