

RX-T Trigger Cord Kit

For RX1 Relay



Operation & Installation Manual

⚠ DANGER

Electrocution Hazard!


Always un-plug the relay module before servicing or wiring. Ensure all power is disconnected.
 Do not remove the grounding pin from the plug; it is necessary for your safety.
 Install all electrical equipment and wiring in accordance with national and local electric codes.
 For use in dry locations only (0-80% RH non-condensing)

The RX-T Trigger cord kit allows the RX1 relay to be operated by any 120V trigger device such as a timer or controller which does not have enough current capacity to switch power to the equipment by itself, or to switch power from a different circuit supply.

Kit Includes:

- 3ft female pigtail 2.1 x 5.5 mm
- 6ft 120Vac to 24Vdc power adapter

Step 1
 Connect pigtail to terminal block.

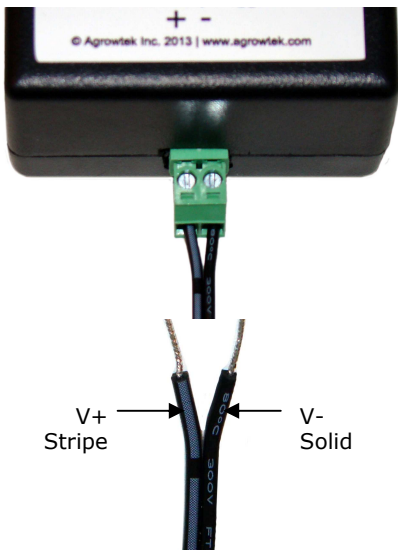

Step 2
 Connect power adapter to pigtail.



Step 3
 Plug in equipment to RX1, Plug RX1 into power outlet and then plug trigger adapter into controlled outlet.

