

Mini pH & EC Dosing System



Shown with optional DO or ORP probes.

Contents


Overview	2	Time / Date	15
Quick-Start Guide	3	Units	15
Installation Instructions	4	Logging Interval	16
Mounting the Transmitter	4	COMM Mode	17
DIN Rail Mounting Kit	4	Device Address	17
Connecting Sensor Probes	5	Manufacturing Info	17
GrowNET Connection to ADi Intelligent Pump	5	Display Back Light Timer	18
Operation Instructions	6	Dosing Pump Control Menu	18
Definitions	6	Run/Stop	19
Dosing Cycles	7	Recipe Menu	19
LCD Menu Operation Instructions	8	Pump Mode	20
High / Low History	8	Dose Size	20
Graphing	8	EC Lock	21
Main Menu	9	Targets Menu	21
Alarms Menu	9	Target Value	22
Alarms Configuration	9	Deadband	22
Alarm Buzzer	10	Pump Configuration Menu	23
Calibration Menu	10	EC, pH Delay	24
Temperature Calibration	10	Flow Rate	24
pH Calibration	11	Priming	25
Conductivity Calibration	12	Maintenance	25
O.R.P. Calibration	12	Technical Information	26
D.O. Calibration	13	Specifications	26
Clear Calibration	13	Storage and Disposal	26
Advanced Calibration	14	Warranty	26
Analog Output Calibration	14		
Setup Menu	15		

Overview

The MDX dosing system is designed to automatically dose nutrients and pH buffers into stock feed tanks to maintain target pH and conductivity levels. The mixed solution is then drawn off of the tank to feed plants in a recirculating or drain-to-waste system. The MDX system operates independently of other systems and doses on demand automatically.

SXL liquid level sensors are an ideal addition to automatically maintain the feed tank water level with fresh water from an RO or filter water supply. SXL sensors are available in auto-fill kits and do not require any controller to operate.

Fertigation Layout

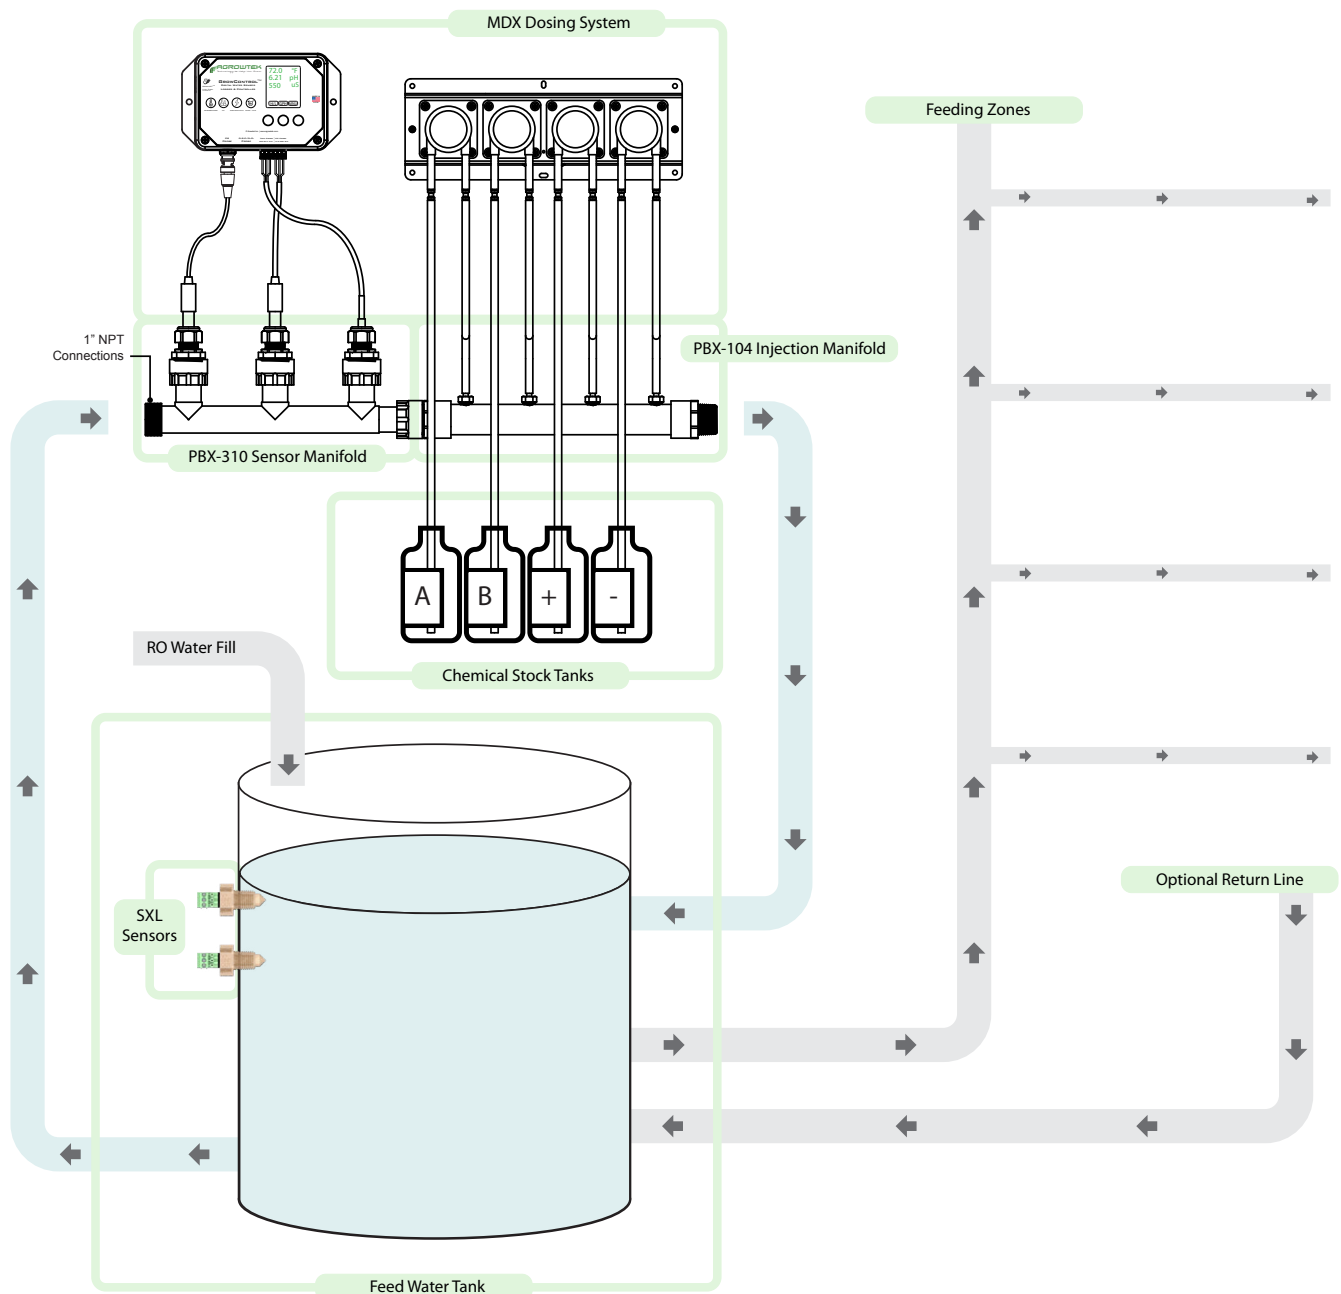


Quick-Start Guide

1. Connect Sensor Probes

pH and ORP or DO sensors are equipped with “BNC” style connectors; push on and then turn to lock in place.


Temperature and EC probes have a screw terminal block. Make the connections according to the label on the transmitter. The terminal block may be removed for easier wire installation or for service.

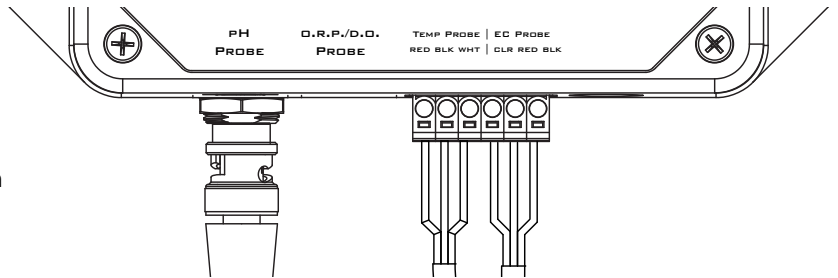

2. Connect Dosing Pump

A direct-link connection between a SXH sensor and ADi pump requires Agrowtek’s cross-over adapter.

⚠ IMPORTANT! ONLY use cross-over adapters provided by Agrowtek.
Incorrect cross-over adapters or cables can cause damage to the equipment.

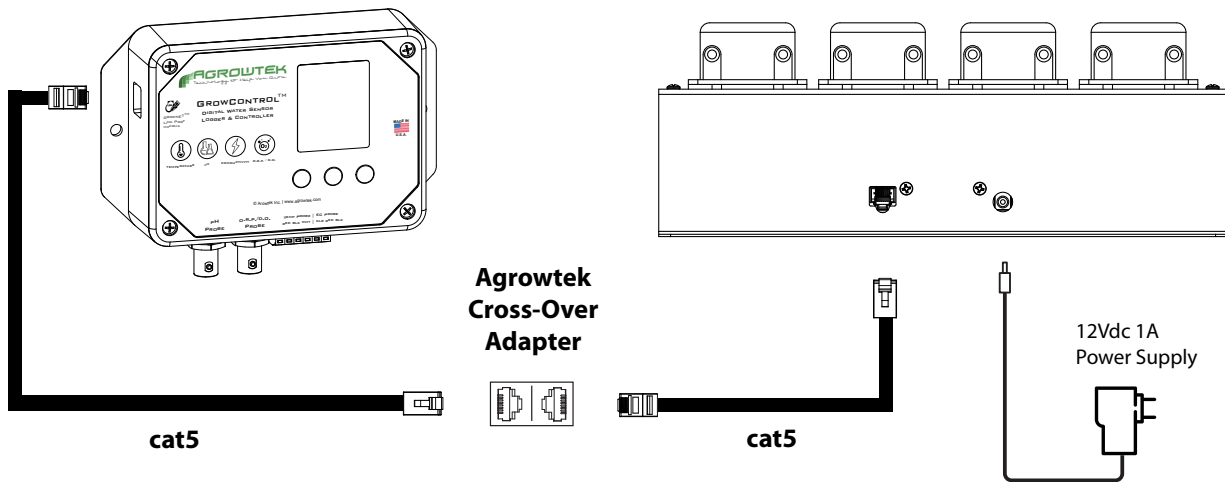


3. Connect Tubing & Configure Pumps

Normal pump rotation is CW. The left tube is inlet (suction) and the right tube is outlet (pressure.)

Connect tubing with barbed fittings as shown. Tubing lengths may be as long as 50ft. Check for proper flow with the prime function.

Use the LCD menus to configure each pump and the the system parameters and then put the pumps into RUN mode to begin auto dosing.

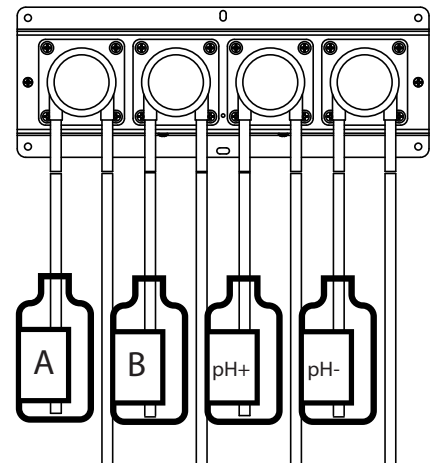


Installation Instructions


Install with the connections facing down to reduce the risk of water permeating the enclosure.

Avoid locations with dripping water or heavy splash risk; the transmitter is best kept dry for longest life and highest accuracy.

A probe manifold is recommended for best sensor accuracy.

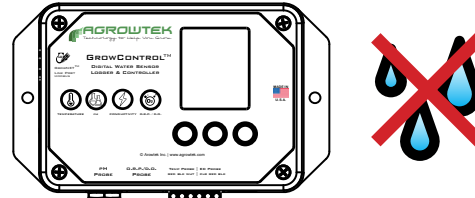

Shown with optional PBX-310 sensor manifold designed for easy installation with a dedicated recirculating pump for continuous sampling.

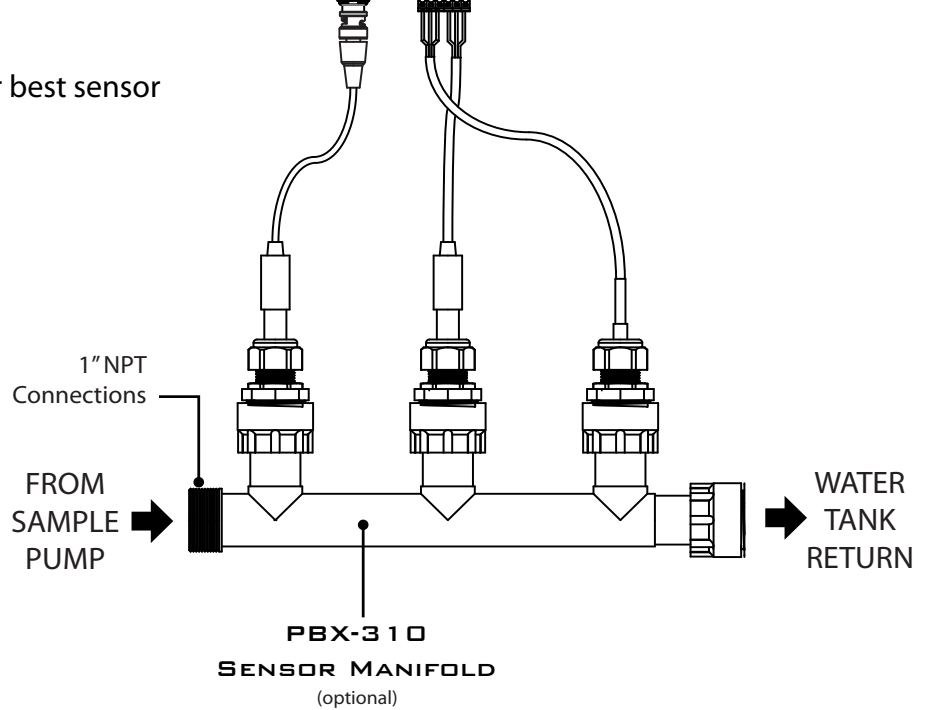

Mounting the Transmitter


Wall mounting tabs are provided for installing against a vertical wall surface.

1. Measure out the hole locations per the dimensions, or mark the holes using the transmitter as a template.
2. Drill holes and install anchors (if required, not included.) Keep the transmitter away from dust during work.
3. Install the transmitter to the wall surface using appropriate screws.

DIN Rail Mounting Kit


A DIN rail mounting kit installs onto the mounting flanges with the provided hardware for mounting the device on a standard DIN rail.

1. Screw the DIN rail brackets onto the flanges using the provided screws.
2. Snap the transmitter into place on a DIN rail.
3. Use the latches on the DIN brackets to release the transmitter from the DIN rail.

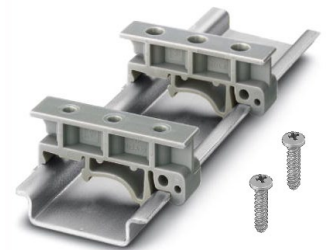

Connecting Sensor Probes

pH and ORP or DO sensors are equipped with "BNC" style connectors which push on and then turn 1/4 rotation CW to lock them in place. Temperature and EC probes have a screw terminal block; make the connections according to the label on the transmitter. The terminal block may be removed for easier wire installation or for service.

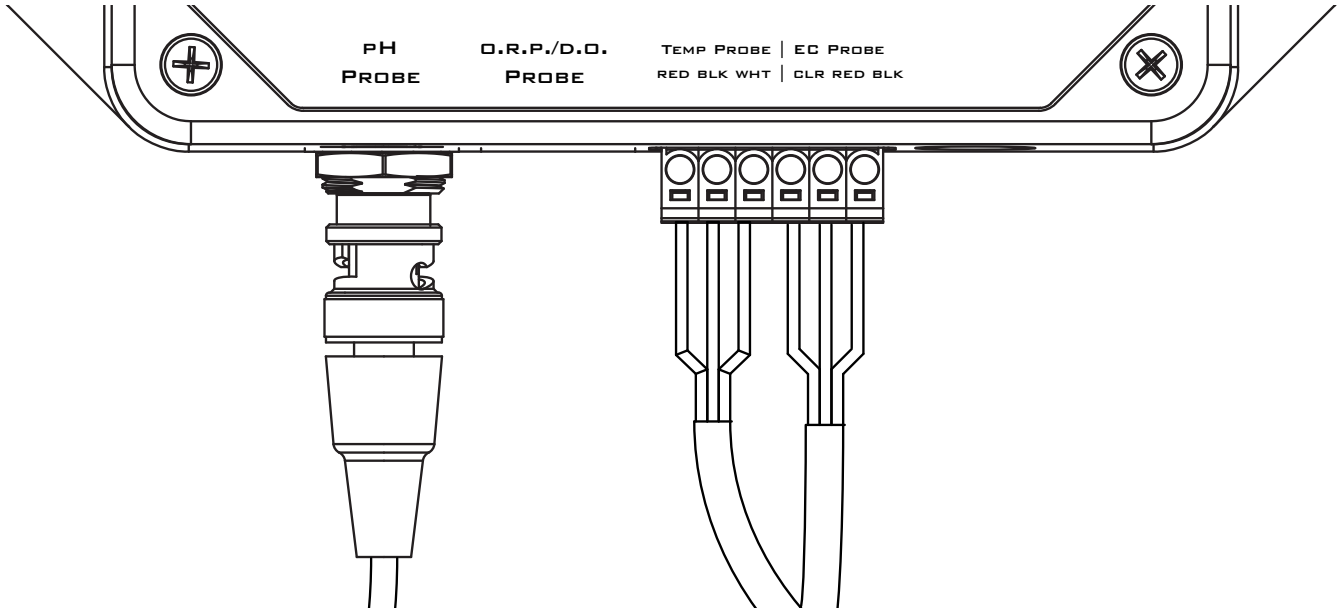


⚠️ pH & ORP probes must remain wet to avoid damage. Do not allow probe tips to dry.

GrowNET Connection to ADi Intelligent Pump

A direct-link connection between a SXH sensor and ADi pump requires Agrowtek's cross-over adapter.

⚠️ IMPORTANT! ONLY use cross-over adapters provided by Agrowtek.
Incorrect cross-over adapters or cables can cause damage to the equipment.

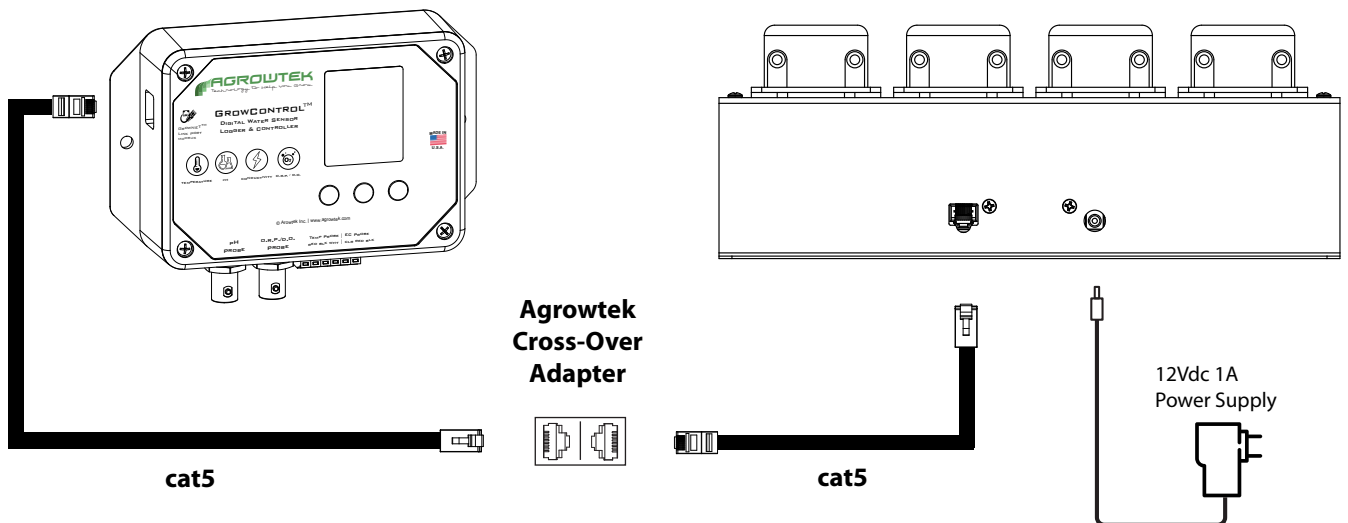

Operation Instructions

The SXH/M hydro sensor continuously monitors the sensor probes and compares the readings to “target” set points for pH and conductivity (EC). If the readings are outside of the allowed range, the pumps will sequentially dose according to the configured recipe, then wait a set delay time before repeating until the targets are achieved.


Definitions

Target

A “target” is a set-point that the system is looking to achieve such as maintaining 1000uS or 6.00pH.

Dead Band

A “dead band” is the amount of drift allowed from the target before starting dosing. To allow a drift of 100uS below the target, set the EC deadband value to “100uS”. Similarly, to allow a drift of 0.20 pH above or below the target, enter a pH deadband of “0.20.”

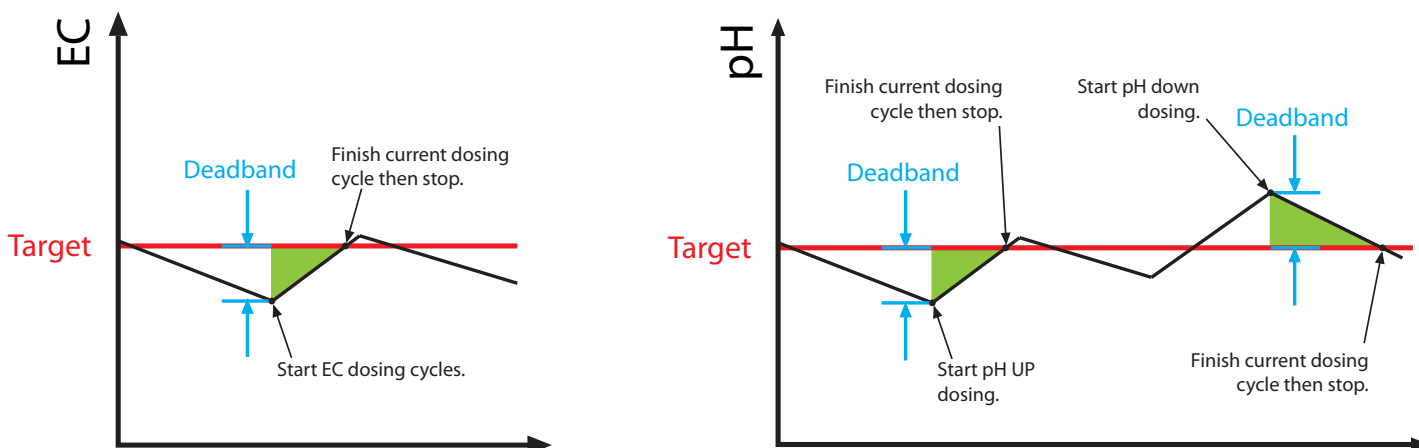

Recipe

Each pump is assigned a mode (EC/pH Up/pH Down) and a dose size.

EC Mode: Pump will dose in sequence with other EC mode pumps according to EC targets.

pH Up Mode: Pump will dose when pH is below target.

pH Down Mode: Pump will dose when pH is above target.

EC LOCK

EC LOCK is a menu option that appears on pumps assigned to pH control. EC LOCK prevents pH dosing while EC targets are not satisfied and nutrient dosing is on-going.

EC/pH Delay

Both EC and pH dosing loops contain a “delay” time setting. If a dosing cycle is required, the delay time begins after the dosing cycle has completed, preventing the system from beginning another dosing cycle before the previous cycle has had time to mix into the system.

If you are unsure of what time delay to use, begin with something large such as 600 seconds (10 minutes.) Observe the graphical history on the screen to determine if the reading has leveled off before the dosing pump begins another cycle. Adjust the delay time to ensure the sensor reading has leveled off sufficiently before another dosing cycle begins to prevent over-dosing of the tank.

Dosing Cycles


EC Dosing

The system begins by checking the EC against the target set point. If the sensor reading is outside of the target range, the pump will begin a nutrient dosing cycle. The cycle begins by checking the first pump to see if it is assigned to nutrient control (EC mode.) If it is, the pump's recipe volume is dosed. Once the dose completes, the pump continues to dose each remaining EC pump until the last EC pump has completed its recipe dose.

pH Dosing

The pump then checks the pH value to see if it is with the target range. If the pH requires adjustment, each pump is checked for the appropriate pH up or down assignment and the recipe dose is administered.

A EC or pH delay time follows each cycle as set. EC and pH may dose independently or together in a cycle as required by the sensor readings or as configured with the EC LOCK option.

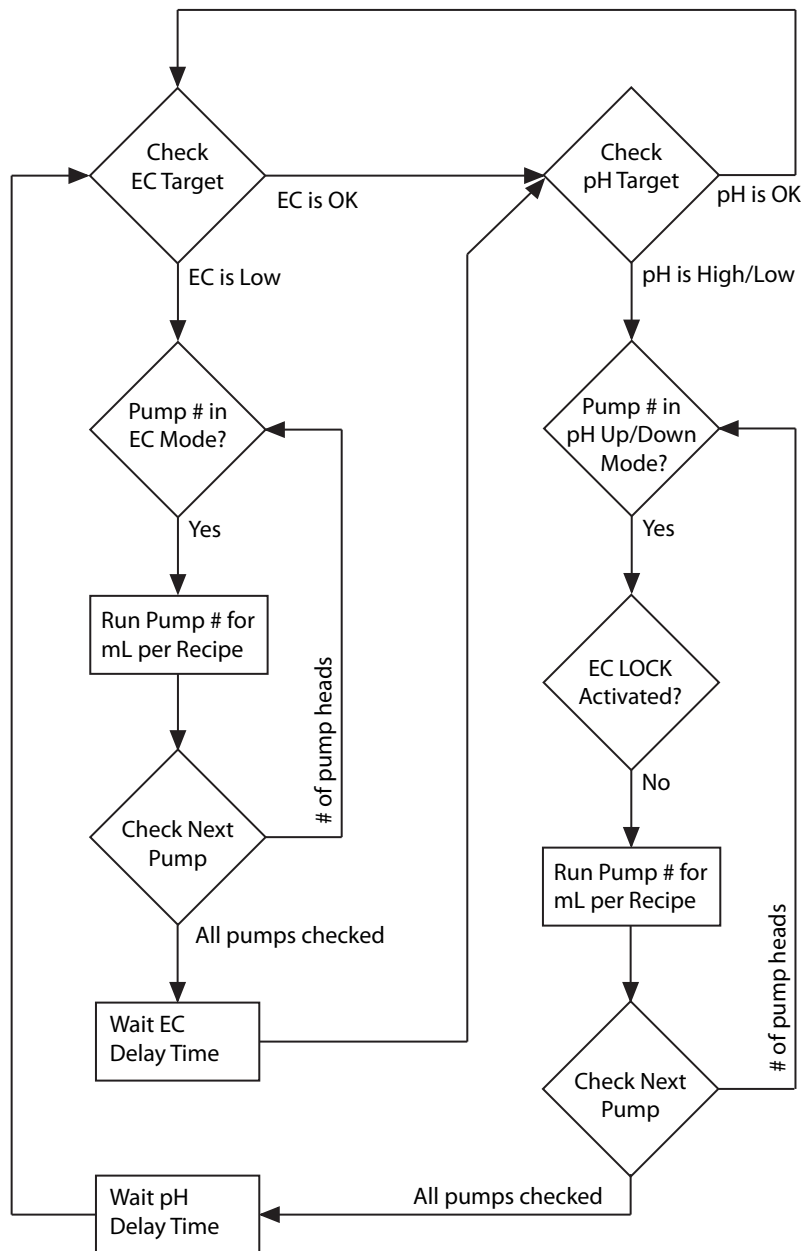


LCD Menu Operation Instructions

3-button/LCD display interface allows easy monitoring of sensor values.

Simple menu driven setup for configuring pump recipes, system settings, sensor calibration and more.

The main screen displays the real-time sensor readings from the attached sensors.

Each button is labeled at the bottom of the display to describe its function on the current screen or menu.

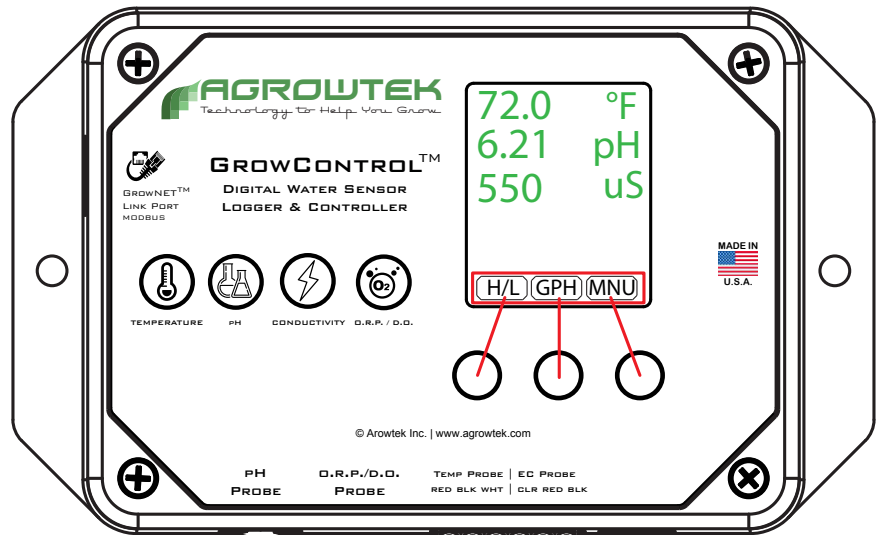


High / Low History

H/L

Simple minimum and maximum recorded values are stored until the user resets the values to the current readings. To view the minimum and maximum values since the last reset, press the button labeled **H/L**.

To clear the min/max history, press the **RST** button to reset. The min and max values will all be set to the current readings and will update with higher or lower readings as they occur.

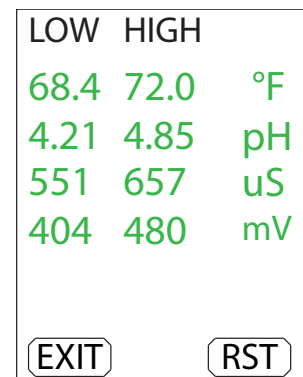


Graphing

GPH

The display can graph the most recent 120 data points from the sensor's internal data point memory. With the default logging interval of 60 seconds, the graph displays the last two hours of data.

The sensor value is plotted in green. Temperature, if overlaid on the plot, is red. Alarm levels as set by the user are plotted in yellow. Pressing the **RFH** button refreshes the data and replots the graph.

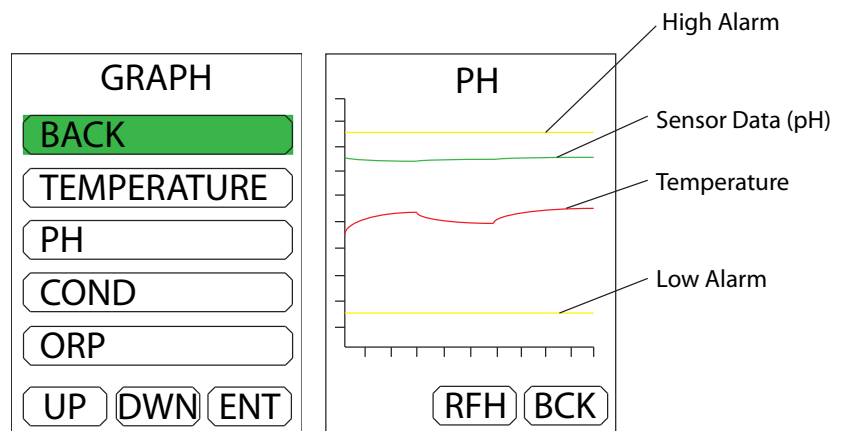

Main Menu


MNU

The main menu is how the alarms are set, sensors are calibrated and general settings such as time, date and units are configured.

If a dosing pump is directly connected to the SXHM GrowNET port, the pump settings are also accessed by the main menu.

Use the UP or DWN buttons to navigate the menu.

Use the ENT button to enter a selection.

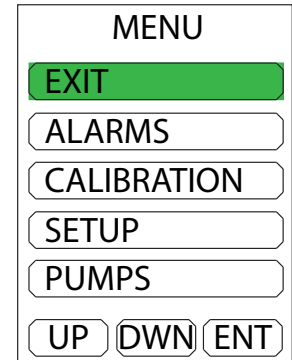


Alarms Menu

MNU ► ALARMS


High and low alarm set points may be configured for each sensor value to activate an internal buzzer or send alerts with the optional wifi module.

The out-of-range value will be displayed in red to indicate the cause for the alarm.


Additionally, alarm limits are plotted on the graphs to indicate values are within the desired range.

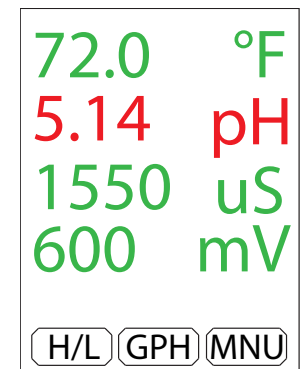


Alarms Configuration

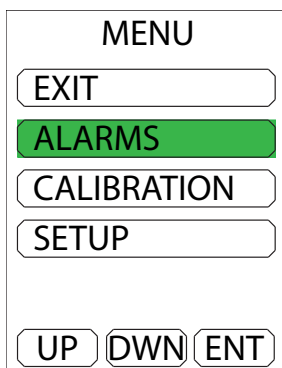


1. Select **ALARMS** from the main menu.

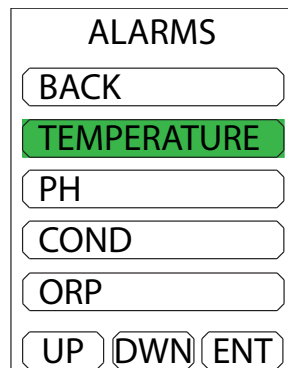

2. Select a sensor to configure set points.

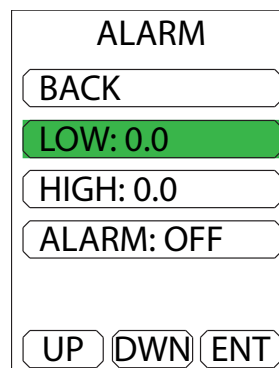

3. Select the setting to adjust.

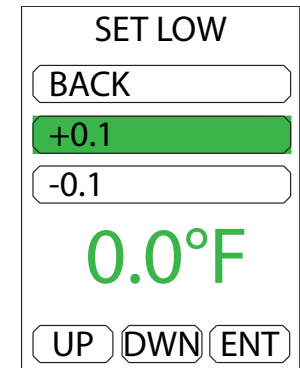

4. Adjust to the desired value. Hold UP or DWN to jog the value.

Alarm Buzzer

ALARM

BACK

LOW: 0.0

HIGH: 0.0

ALARM: OFF

UP DWN ENT

1. Select **ALARM: OFF**

SET ALARM

BACK

SET ON

SET OFF

OFF

UP DWN ENT

2. Select **SET ON** then press **BACK** to exit.

To disable the alarm buzzer, set the alarm to OFF.

Calibration Menu

MNU ► CALIBRATION

Calibration can be performed for each sensor with the LCD interface using either standard calibration wizards, or advanced manual calibration methods for non-standard calibration solutions.

The date of the last calibration for each sensor is stored in memory and displayed at the start of each calibration wizard.

MENU

EXIT

ALARMS

CALIBRATION

SETUP

UP DWN ENT

CALIBRATION

BACK

TEMPERATURE

PH

COND

CLEAR ALL

UP DWN ENT

Temperature Calibration

MNU ► CALIBRATION ► TEMPERATURE

CALIBRATION

BACK

CALIBRATE

ADVANCED

UP DWN ENT

1. Select **CALIBRATE** from the temperature calibration menu.

TEMPERATURE
LAST CALIBRATION
10/19/2017

PRESS NEXT TO
ADJUST
TEMPERATURE
READING.

EXIT NEXT

2. Press **NEXT** to continue.

OFFSET

BACK

+0.1

-0.1

72.2°F

UP DWN ENT

3. Adjust to the desired value. Hold **ENT** to jog the value by 10x.

CONFIRM?

OLD
68.1 °F

NEW
72.2 °F


YES NO

4. Confirm the new reading or press **NO** to cancel.


pH Calibration

MNU ► CALIBRATION ► PH


pH calibration is a two-point process requiring both pH 7 and pH 4.01 calibration solutions. The temperature probe must be inserted into the calibration solution at the same time as the pH probe.

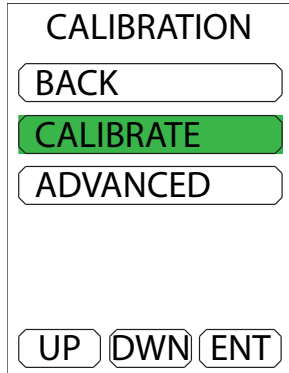


1. Select **CALIBRATE** from the pH calibration menu.

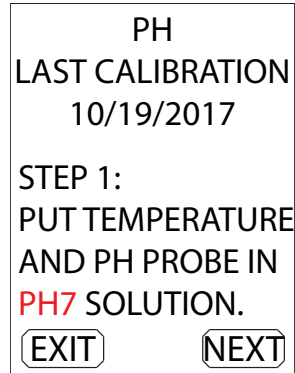


2. Follow the instructions then press **NEXT** to continue.

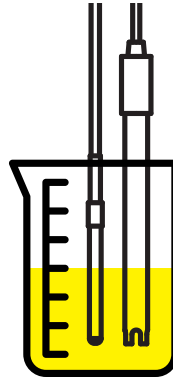


pH 7 Calibration Solution

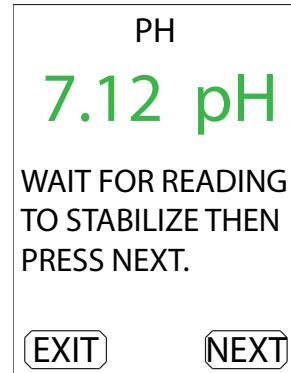


3. When the reading is stable, press **NEXT** to calibrate pH 7.

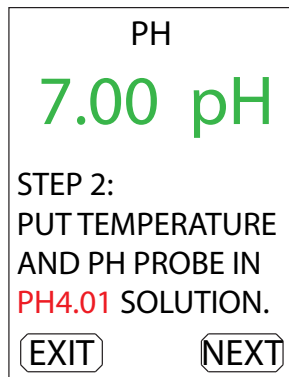

4. Clean the probes with DI/RO and change calibration solution.

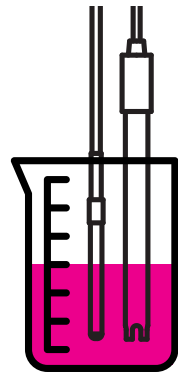

pH 4.01 Calibration Solution

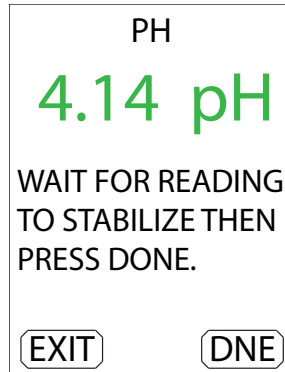

5. When the reading is stable, press **DONE** to calibrate pH 4.01 and finish calibration.

Conductivity Calibration

MNU ► CALIBRATION ► COND

Conductivity calibration is a single point process requiring 1413 uS calibration solution. The temperature probe must be inserted into the calibration solution at the same time as the conductivity probe.

CALIBRATION

BACK

CALIBRATE

ADVANCED

UP DWN ENT


1. Select **CALIBRATE** from the conductivity calibration menu.

CONDUCTIVITY
LAST CALIBRATION
10/19/2017

PUT TEMPERATURE
AND EC PROBE IN
1413uS SOLUTION.

EXIT NEXT

2. Follow the instructions then press **NEXT** to continue.

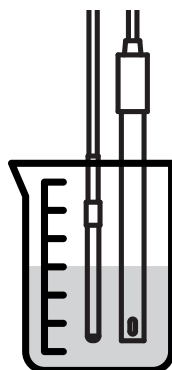

CONDUCTIVITY
1440 uS

WAIT FOR READING
TO STABILIZE THEN
PRESS DONE.

EXIT DNE

3. When the reading is stable, press **DONE** to complete the calibration.

O.R.P. Calibration

MNU ► CALIBRATION ► NEXT ► ORP

ORP (optional) calibration is a single point process requiring 470 mV calibration solution.

CALIBRATION

BACK

CALIBRATE

ADVANCED

UP DWN ENT

1. Select **CALIBRATE** from the conductivity calibration menu.

ORP
LAST CALIBRATION
10/19/2017

PUT ORP PROBE IN
470mV SOLUTION.

EXIT NEXT

2. Follow the instructions then press **NEXT** to continue.



CONDUCTIVITY
1440 uS

WAIT FOR READING
TO STABILIZE THEN
PRESS DONE.


EXIT DNE

3. When the reading is stable, press **DONE** to complete the calibration.

D.O. Calibration

MNU ► CALIBRATION ► NEXT ► DO

ORP (optional) calibration is a single point process requiring 470 mV calibration solution.

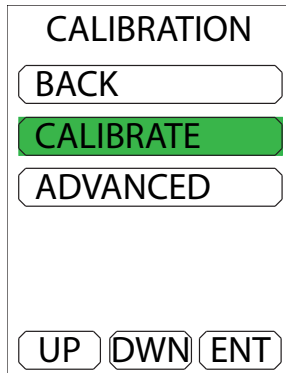

CALIBRATION


BACK

CALIBRATE

ADVANCED

UP DWN ENT

1. Select **CALIBRATE** from the conductivity calibration menu.

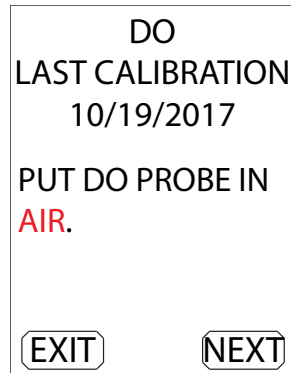


DO

LAST CALIBRATION
10/19/2017

PUT DO PROBE IN
AIR.

EXIT NEXT

2. Follow the instructions then press **NEXT** to continue.

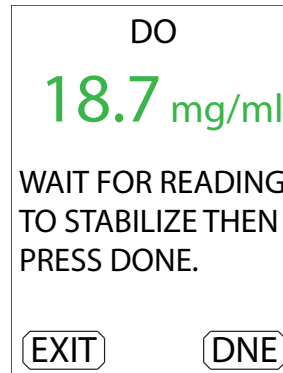

DO

18.7 mg/ml

WAIT FOR READING
TO STABILIZE THEN
PRESS DONE.


EXIT DNE

3. When the reading is stable, press **DONE** to complete the calibration.

Clear Calibration

MNU ► CALIBRATION ► NEXT

Calibration can be restored to factory defaults by selecting **CLEAR ALL**.

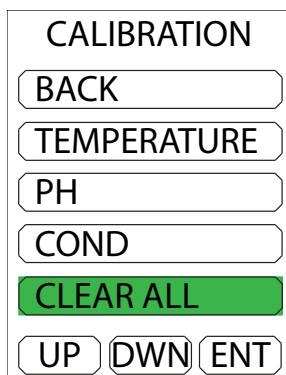

CALIBRATION

BACK

TEMPERATURE


PH

COND

CLEAR ALL

UP DWN ENT

1. Select **CLEAR ALL** from the calibration menu.

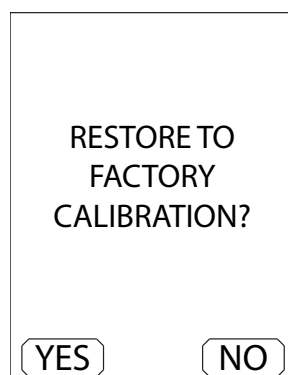

RESTORE TO
FACTORY
CALIBRATION?

YES NO


2. Press **YES** to restore factory calibration.

Advanced Calibration

Sensors values may be manually calibrated to alternate standards using the advance calibration features.

OFFSET calibration applies a linear offset adjustment to the value.
SPAN calibration applies an adjustment to the slope of the sensor value.

Note: pH and conductivity are temperature compensated (ATC) sensors. For accurate calibration, the temperature probe must be in the pH and conductivity calibration standards. Allow all readings to stabilize before performing an offset or span calibration operation.

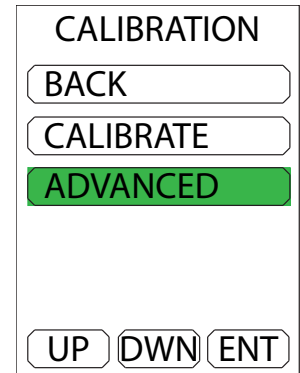

PH

CAL 7 sets the pH 7 calibration (offset.) Cal 7 automatically clears span calibration point prior performing pH 7 calibration.

SPAN calibration is performed typically at pH 4.01 or 10.0 (*Always perform pH 7 calibration first.*)

CONDUCTIVITY

SET CAL 0 calibrates a dry EC probe if required. (not recommended)

SPAN calibration is recommended at 1413uS. If using ppm standards, ensure the display is in the correct units.

DISSOLVED OXYGEN (D.O.)

OFFSET calibration is recommended in zero oxygen solution.

SPAN calibration is recommended at a known DO level or in air.

OXIDATION REDUCTION POTENTIAL (O.R.P.)

OFFSET is recommended at 270mV

SPAN is recommended at 470mV


Analog Output Calibration

4-20mA analog outputs may also be calibrated with a positive or negative offset to compensate for variation in DAC's/ADC's. The sensors' current output may be incrementally increased or decreased in steps of 0.005mA over a range of +/-2mA.

1 Offset bit = 0.005mA, Range = +/-400 bits (+/-2mA)

This calibration procedure is optional and only for use with custom PLC applications.



1. Observe the PLC's input or data readings.
2. Increase or decrease the offset value to incrementally adjust the current output until the values match.

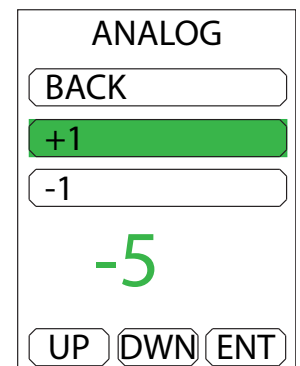

Setup Menu

MNU ► SETUP


The setup menu is where the time and date are set, the units are configured, logging interval is adjusted and advanced communications settings are available.

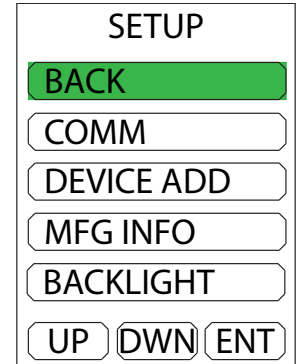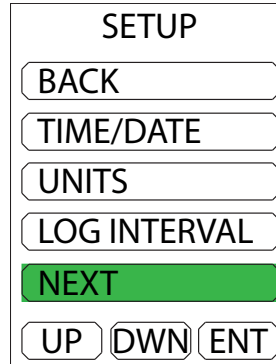


Time / Date

MNU ► SETUP ► TIME/DATE


Sensors include a precision real-time clock with battery back-up for time-stamping the data log information with the time and date. The last calibration for each sensor is also time stamped.

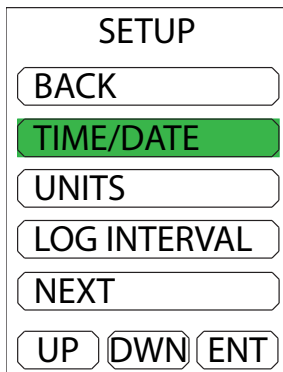


1. Select **TIME/DATE** from the setup menu.

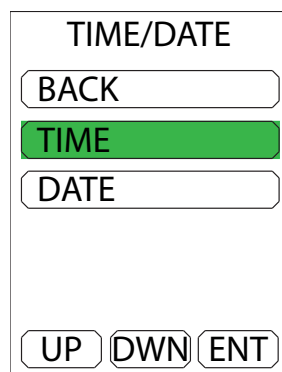

2. Select **TIME** or **DATE** to adjust.

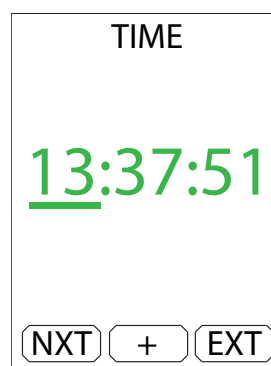

3. Use **NXT** to select the value to adjust. Use **+** to increment the value.

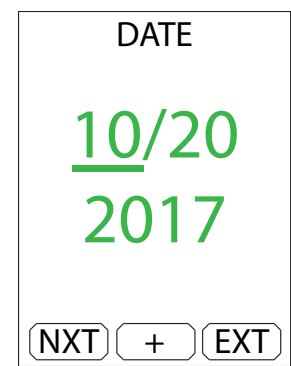



4. Use **EXT** to exit the menu.

Units

MNU ► SETUP ► UNITS

Temperature and Conductivity may be displayed in alternate units.

Select a sensor value to change the default display and working units.

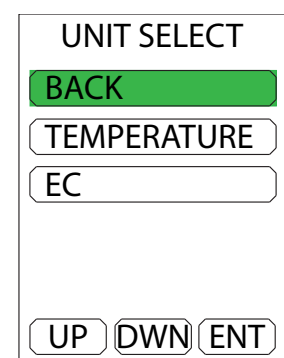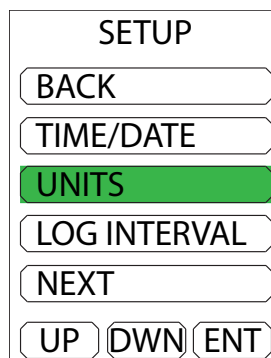

Configure temperature units:

Temperature may be displayed in °F or °C.

Note: Check alarm settings when converting temperature units.

UNIT SELECT

BACK

TEMPERATURE

EC

UP DWN ENT

1. Select **TEMPERATURE** from the units menu.

UNIT SELECT

BACK

°C

°F

68.0°F

UP DWN ENT

2. Select the desired units and press **ENT**.

Configure conductivity units:

Conductivity may be displayed in default units of microSiemens (uS) or total dissolved solids in parts per million (ppm.)

The TDS conversion factor used by this meter is 500.

$$\text{TDSppm} = \text{uS} \times 0.5$$

UNIT SELECT

BACK

TEMPERATURE

EC

UP DWN ENT

1. Select **EC** from the units menu.

UNIT SELECT

BACK

US

TDS

654 ppm

UP DWN ENT

2. Select the desired units and press **ENT**.

Logging Interval

MNU ► SETUP ► LOG INTERVAL

Adjust the interval for recording data points in the on-board memort. Acceptable values are from 1 - 65535 seconds.

21,600 data points can be stored for each sensor value. The most recent 120 data points are shown on the graphical history.

The entire data history may be downloaded from the sensor to a .csv file with the LX1 USB AgrowLINK and free software.

Note: 60 second intervals = 15 days of data storage.

SETUP

BACK

TIME/DATE

UNITS

LOG INTERVAL

NEXT

UP DWN ENT

1. Select **LOG INTERVAL** from the setup menu.

LOGGIN INTERVAL

BACK

+1

-1

60 SEC

UP DWN ENT

2. Adjust the value then select **BACK**.

COMM Mode

MNU ► SETUP ► NEXT ► COMM

COMM mode specifies whether the sensor is a normal passive device or “mini-master” device.

NORMAL Use with GrowControl master controller systems or stand-alone and data logging applications.

MINI-MASTER Use with MDX mini-dosing system. (GrowNET cross-over adapter required.)

SETUP

BACK

COMM

DEVICE ADD

MFG INFO

UP DWN ENT

COM MODE

NORMAL

MINI MASTER

UP DWN ENT

Device Address

MNU ► SETUP ► NEXT ► DEVICE ADD

Sensors are digitally addressable from 1-249 and will be assigned an address automatically by Agrowtek’s control systems, or can be configured manually for MODBUS applications via the menu.

NOTE: All of Agrowtek’s devices use address 254 as a broadcast address.

SETUP

BACK

COMM

DEVICE ADD

MFG INFO

UP DWN ENT

DEVICE ADDRESS

BACK

+1

-1

0 Addr

UP DWN ENT

1. Select **DEVICE ADD** from the setup menu.

2. Adjust the value then select **BACK**.



NOTE: Address must be set to 0 for Dosing Pump control.

The “PUMPS” menu item will not appear unless the device address is set to 0.

Manufacturing Info

MNU ► SETUP ► NEXT ► MFG INFO

Manufacturer information such as serial number, date of manufacture, hardware and firmware versions can be read from the MFG INFO page.

SETUP

BACK

COMM

DEVICE ADD

MFG INFO

UP DWN ENT



SERIAL NUMBER:
17090554
DATE OF MFG:
09/15/17
HW VERSION:
C
FW VERSION:
02.03.84
EXIT

Display Back Light Timer

MNU ► SETUP ► NEXT ► BACKLIGHT

The display back light can be programmed to turn off after a specified time of inactivity from the last time a button is pressed.



The delay can be set from 1-255 minutes, or set to 0 to disable the back light timer and keep the display on continuously.

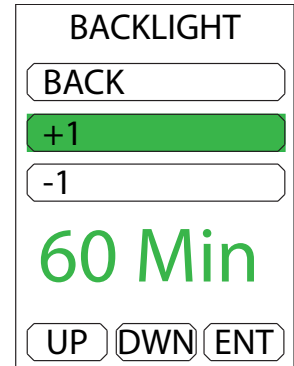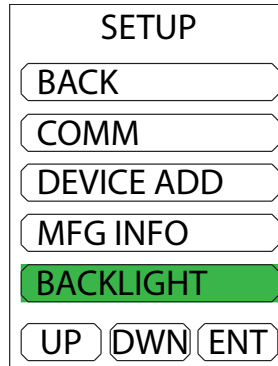

Dosing Pump Control Menu

MNU ► PUMPS

The PUMPS menu is displayed when the hydro sensor is connected to a dosing pump and contains all of the configuration, target and recipe settings pages for controlling the pumps.

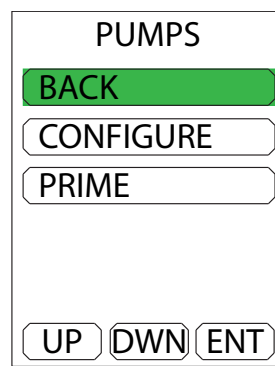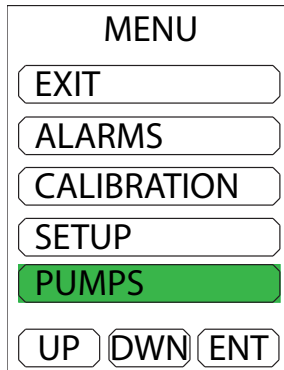


The "Pumps" menu item will not appear unless the communication mode is set to "MINI-MASTER" and the device address is set to "0" (see COMM MODE and DEVICE ADDRESS.)


Run/Stop

MNU ► PUMPS ► RUN/STOP


The dosing pumps must be placed into RUN mode for autonomous dosing to take place. The dosing pumps may be immediately disabled to stop a dosing operation due to an error, nutrient outage, or maintenance requirement. To stop all dosing pumps and prevent autonomous operation, place the pump into STOP mode.

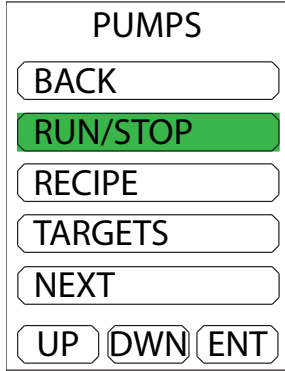

The RUN/STOP menu enables or disables the pumps

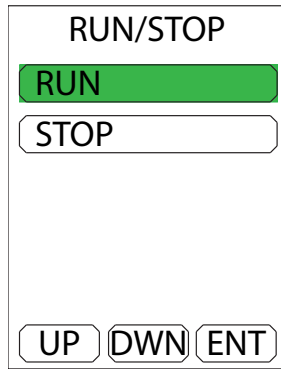

Select **RUN** to allow the pumps to operate based on your settings.

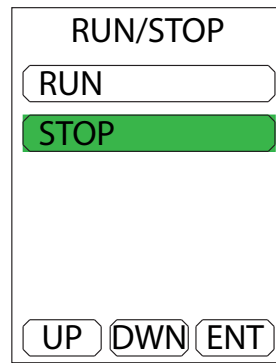

Select **STOP** to disable the pumps from running automatically and to abort any current operation.

Recipe Menu


MNU ► PUMPS ► RECIPE

Each pump is configured with a “recipe” containing the pump mode (EC or pH) and dose volume (mL.)


MDX systems are available with 1, 2 or 4 dosing pump heads and each may be configured for EC or pH control in any order or combination.

NOTE: Dosing will occur from the lowest to the highest numbered pump when more than one pump is in the same mode (EC, pH-UP or PH-DOWN.)


Select a pump number to configure the recipe settings as described below.

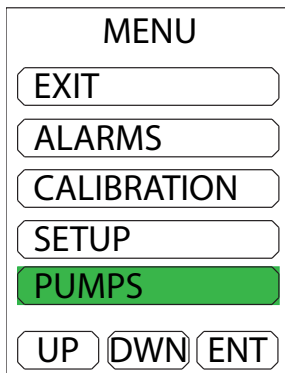

1. Select **PUMPS** to configure the pumps.

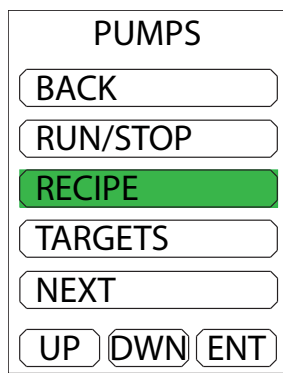

2. Select **RECIPE** to configure the pump parts.

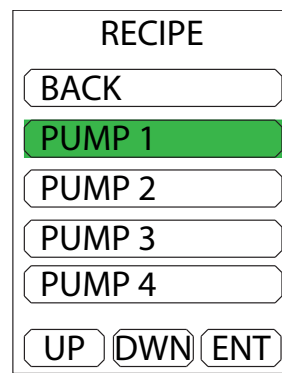

3. Select a pump to configure the its mode and dose size.

Pump Mode

MNU ► PUMPS ► RECIPE ► PUMP 1

Pumps may be configured for EC (nutrient) or pH up or down.

If the pump is not in use, select OFF mode to disable it from autonomous control.

MENU

EXIT

ALARMS

CALIBRATION

SETUP

PUMPS

UP DWN ENT

1. Select **PUMPS** to configure the pumps.

RECIPE

BACK

PUMP 1

PUMP 2

PUMP 3

PUMP 4

UP DWN ENT

2. Select a pump.

PUMP 1

BACK

PUMP MODE

DOSE SIZE

UP DWN ENT

3. Select **PUMP MODE**.

PUMP MODE

OFF

EC

PH-UP

PH-DOWN

UP DWN ENT

4. Set the pump to the desired mode.

Dose Size

MNU ► PUMPS ► RECIPE ► PUMP 1

Each pump can be assigned a unique dose volume in mL to be injected in sequence. It is recommended to set the volumes to amounts that will cause a change of 20-30% of the deadband range. This would mean that 3-5 dosing cycles would be required to reach the target value. Some experimentation with dose sizes may be required to determine the best settings for your process. Select a dose size that will not cause over-dosing of the reservoir if one extra cycle is performed.

MENU

EXIT

ALARMS

CALIBRATION

SETUP

PUMPS

UP DWN ENT

1. Select **PUMPS** to configure the pumps.

RECIPE

BACK

PUMP 1

PUMP 2

PUMP 3

PUMP 4

UP DWN ENT

2. Select a pump.

PUMP 1

BACK

PUMP MODE

DOSE SIZE

UP DWN ENT

3. Select **DOSE SIZE**.

DOSE SIZE

BACK

+1

-1

100 mL

UP DWN ENT

4. Set the pump to the desired mode.

EC Lock


MNU ► PUMPS ► RECIPE ► PUMP 1

If PUMP MODE is set to PH-UP or PH-DOWN, the EC LOCK option will appear in the pump recipe menu.


The system will skip any pumps with the EC LOCK set to ON whenever the EC target is not within range and the pump is performing EC dosing.

Set the EC LOCK to ON to only allow the pH pump to operate after EC dosing has completed.


Set the EC LOCK to OFF to allow a pH dosing cycle after each EC dosing cycle (if required.)

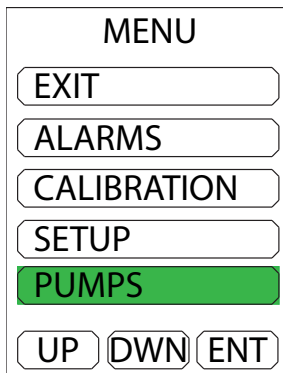


1. Select **PUMPS** to configure the pumps.

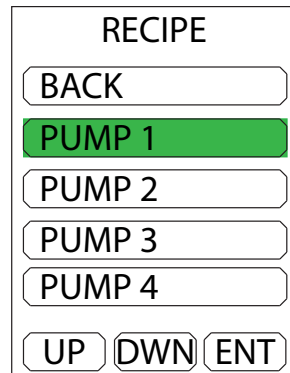

2. Select a pump.

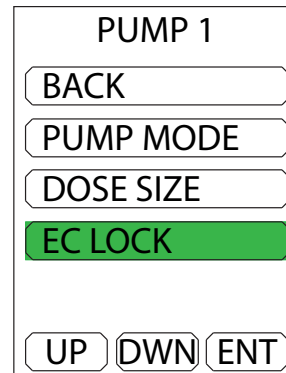

3. Select **EC LOCK**.

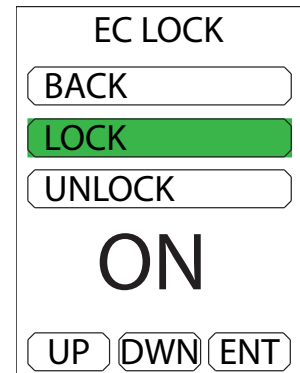


4. Set the pump to the desired mode.

Targets Menu


MNU ► PUMPS ► TARGETS

Targets (set points) are configured for EC and pH for the system to maintain.


The targets menu contains a target set point and a deadband value for the pH and EC sensors.

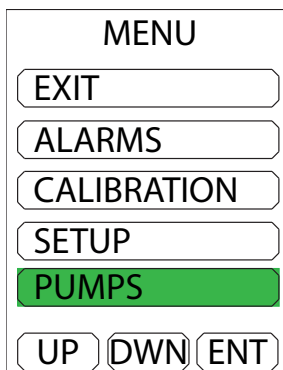

1. Select **PUMPS** to configure the pumps.

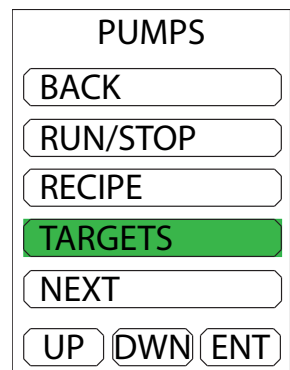

2. Select **TARGETS** from the PUMPS menu.

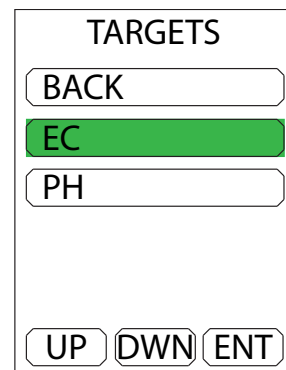


3. Select a sensor to adjust the values.


Target Value

MNU ► PUMPS ► TARGETS ► PUMP 1


The target pH or EC set point is what the system will attempt to maintain by following the dosing “recipe” settings. Set the desired ideal target values for EC and pH.

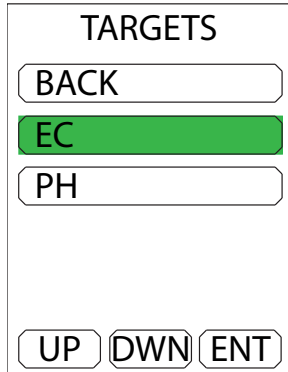




1. Select a sensor to setup the target value.

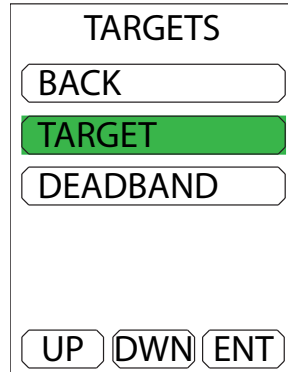

2. Select **TARGET**.

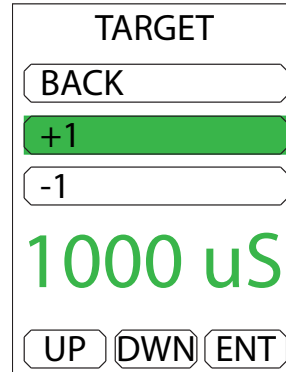



3. Set the target value for the sensor.

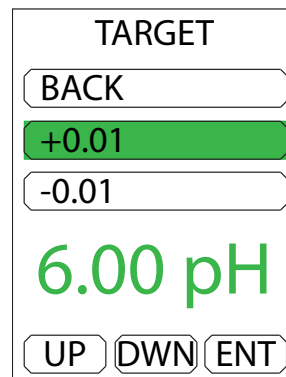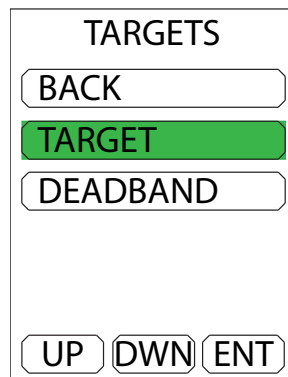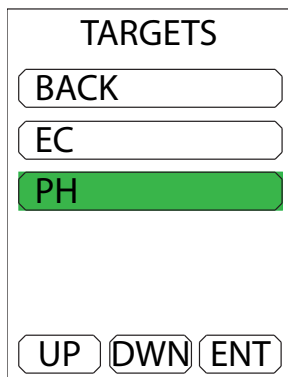


Deadband


MNU ► PUMPS ► TARGETS ► PUMP 1

Deadband is the amount of change or drift from the target before the system takes action. Set the dead band for EC and pH with the amount of drift that is allowed by your process requirements.

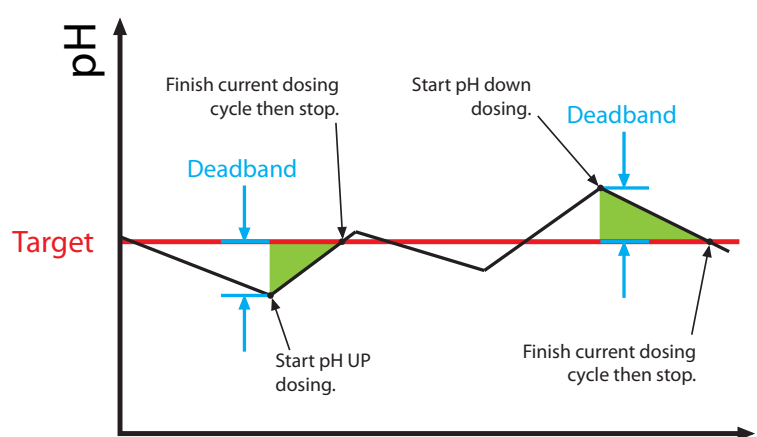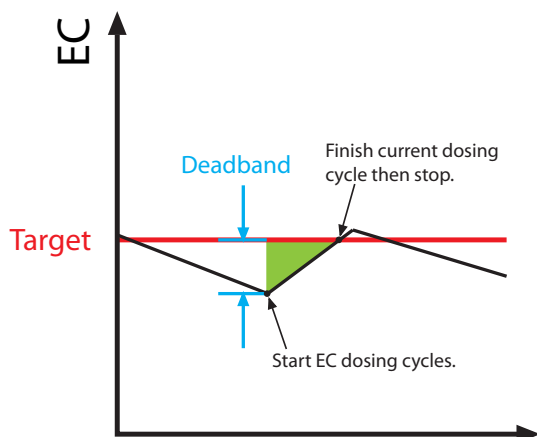


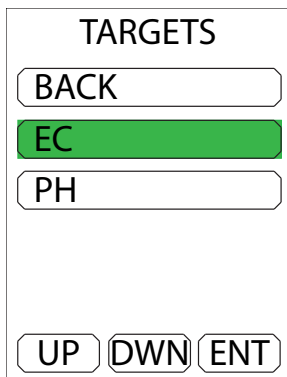




1. Select a sensor to set the deadband value.

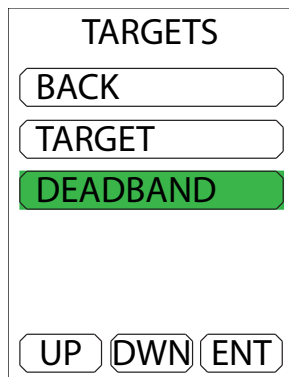

2. Select DEADBAND

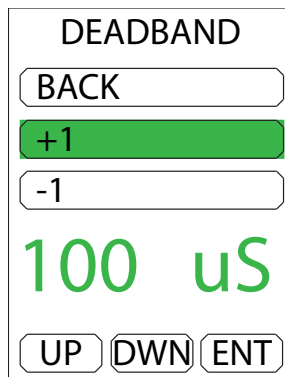


3. Set the deadband value for the sensor.

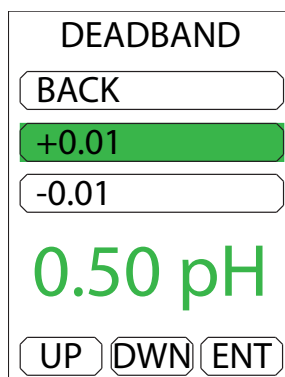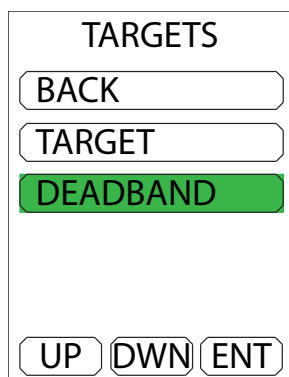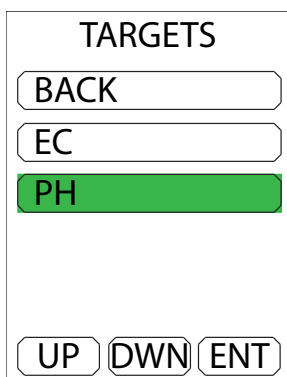


Pump Configuration Menu




The configuration menu contains the settings for the EC and pH delay times and the flow rate calibration for the pumps.

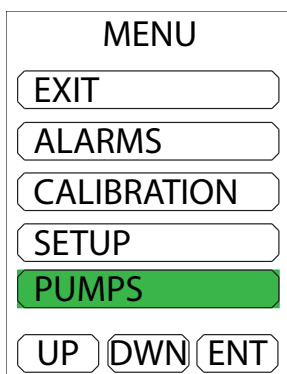


1. Select **PUMPS** to configure the pumps.

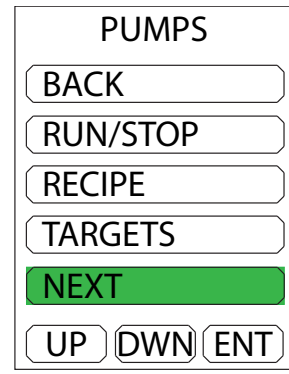

2. Select **NEXT** from the PUMPS menu.

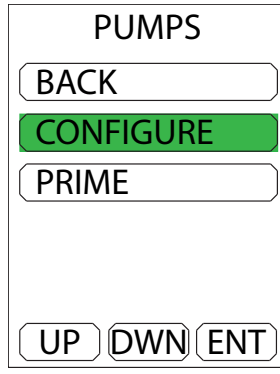

3. Select **CONFIGURE** from the PUMPS menu.

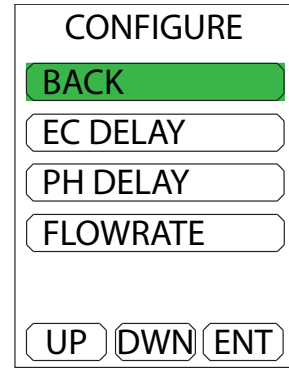

4. Choose a setting to adjust.

EC, pH Delay

MNU ► PUMPS ► NEXT ► CONFIGURE

EC Delay occurs at the end of an EC dosing cycle before beginning another EC dosing cycle.

pH Delay occurs at the beginning of a pH dosing cycle if following an EC dosing cycle or previous pH cycle.

Set these times to allow proper mixing of doses before the system checks if another dosing cycle is required.

PUMPS

BACK

CONFIGURE

PRIME

UP DWN ENT

1. Select **CONFIGURE** from the PUMPS menu.

CONFIGURE

BACK

EC DELAY

PH DELAY

FLOWRATE

UP DWN ENT

2. Select **EC DELAY** or **PH DELAY** from the CONFIGURE menu.

EC DELAY

BACK

+1

-1

90 SEC

UP DWN ENT

3. Adjust the delay times to the desired values.

PH DELAY

BACK

+1

-1

60 SEC

UP DWN ENT

Flow Rate

MNU ► PUMPS ► NEXT ► CONFIGURE

The flow rate is factory calibrated, however, if you are pumping viscous fluids or have long restrictive lengths of tubing, the flow rate may be adjusted based on measured flow rates.

To measure the actual flow rate of the pumps, use the PRIME function (see next section) to operate a pump while timing with a stop watch for 1 minute. Measure the amount of fluid pumped with a graduated cylinder. If 50mL of fluid was pumped in the minute, the actual flow rate is 50mL/min.

Flow rate = Volume Dispensed per Minute

CONFIGURE

BACK

EC DELAY

PH DELAY

FLOWRATE

UP DWN ENT

1. Select **FLOWRATE** from the CONFIGURE menu.

FLOWRATE

BACK

+1

-1

50 mL/min


UP DWN ENT

2. Adjust the value to the calibrated output of the pumps.


Priming




Pumps may be manually operated to prime the lines or for other maintenance reasons. From the Prime menu, select a pump to prime. Pumps may be operated in the forward or reverse direction.

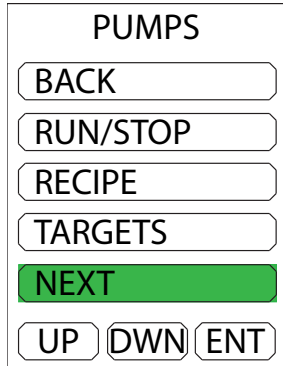


1. Select **NEXT** from the PUMPS menu.

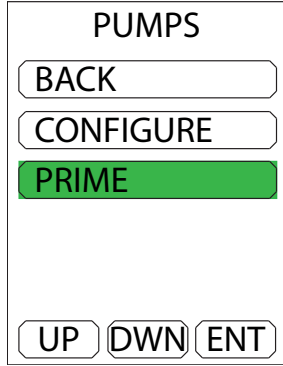

2. Select **PRIME** from the PUMPS menu.

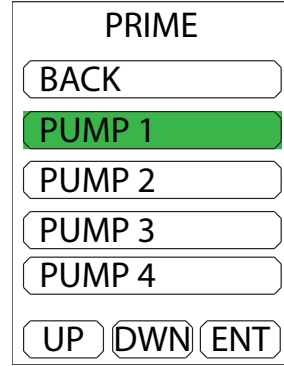

3. Choose a pump to operate.

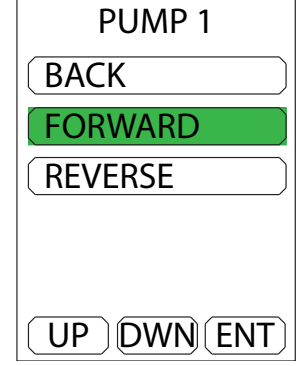

4. Select a direction and hold the **ENT** button. Release the button to stop.

Maintenance

Exterior Cleaning


Exterior may be wiped with a damp cloth with mild dish detergent, then wiped dry.

Probes

Probes must be calibrated periodically according to use. pH probes should be calibrated every two to four weeks. pH, EC and ORP probes may be cleaned in HCL. pH probes should be replaced every 12-24 months.

Pumps

Pump heads are replaceable when the tubing wears out from extended use. Pump heads typically last 12-24 months depending on the volumes being dispensed. Replacement is a simple process of rotating the pump head counter-clockwise 1/8 turn and sliding the head off of the motor shaft. Replace in reverse order.

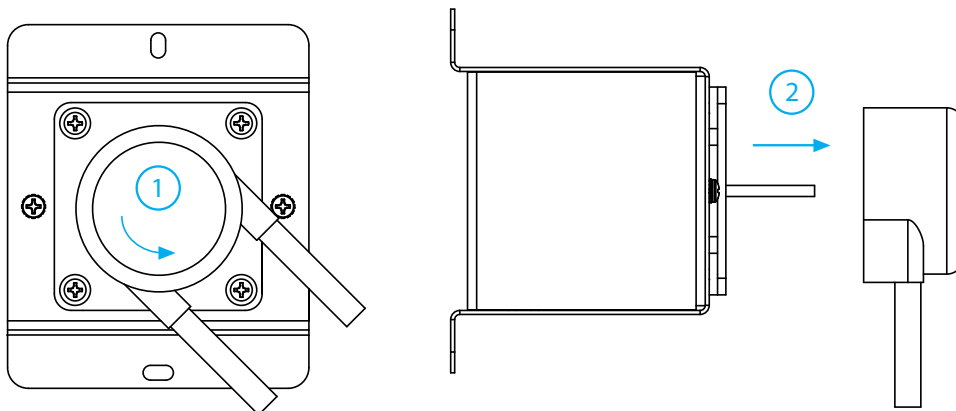

Technical Information

Specifications

Sensor

Power	12-24Vdc, ~2W (5W w/LCD)
Max Cable Distance	1000ft
Optional Interface	LCD w/3 Buttons
Temperature Range	-20 - 60°C
Temperature Accuracy	±2°C, 0.01° resolution
pH Range	0-14pH
pH Accuracy	±0.02pH, 0.01pH resolution
Conductivity Range	0 - 5000 uS (0-2500ppm)
Conductivity Accuracy	±20uS, 2uS resolution
ORP (DO) Range	-1000 - +1000mV (0-20mg/L)
ORP (DO) Accuracy	±10mV, 1mV resolution (±0.1mg/L, 0.1 resolution)
4-20mA Output Resolution	12 bit , 0.005mA

Pump

Power	12Vdc, 1Amp
Pump Heads	Single/Dual/Quad
Flow Rate	Variable, 15-50mL/min
Tubing Material	FDA Approved Norprene
Tubing Size	1/4" O.D. x 3/16" I.D.
Max Outlet Pressure	20psi
Minimum Dose Size	1mL

Storage and Disposal

Storage

Store equipment in a clean, dry environment with ambient temperature between 10-50°C.

Disposal

Products may contain traces of lead or other metals and environmental contaminants. This electronics equipment must not be discarded as unsorted municipal waste, but must be collected separately for the purpose of treatment, recovery and environmentally sound disposal.

Warranty

Agrowtek Inc. warrants that all manufactured products are, to the best of its knowledge, free of defective material and workmanship and warrants this product for 1 year from the date of purchase. This warranty is extended to the original purchaser from the date of receipt. This warranty does not cover damages from abuse, accidental breakage, or units that have been modified, altered, or installed in a manner other than that which is specified in the installation instructions. Agrowtek Inc. must be contacted prior to return shipment for a return authorization. No returns will be accepted without a return authorization. This warranty is applicable only to products that have been properly stored, installed, and maintained per the installation and operation manual and used for their intended purpose. This limited warranty does not cover products installed in or operated under unusual conditions or environments including, but not limited to, high humidity or high temperature conditions. The products which have been claimed and comply with the aforementioned restrictions shall be replaced or repaired at the sole discretion of the Agrowtek Inc. at no charge. This warranty is provided in lieu of all other warranty provisions, express or implied. It is including but not limited to any implied warranty of fitness or merchantability for a particular purpose and is limited to the Warranty Period. In no event or circumstance shall Agrowtek Inc. be liable to any third party or the claimant for damages in excess of the price paid for the product, or for any loss of use, inconvenience, commercial loss, loss of time, lost profits or savings or any other incidental, consequential or special damages arising out of the use of, or inability to use, the product. This disclaimer is made to the fullest extent allowed by law or regulation and is specifically made to specify that the liability of Agrowtek Inc. under this limited warranty, or any claimed extension thereof, shall be to replace or repair the Product or refund the price paid for the Product.